



GREASE GUNS

#57403, #57404, #57407

INSTRUCTION MANUAL

WARNING

Extreme Pressure may cause nozzle extension or whip hose to burst. Use only approved hoses and follow all instructions and warnings.

WARNING

Grease guns can develop high pressure, up to 10,000 PSI. Always use safety glasses and gloves for protection. Keep hands clear of the extension or whip hose during operation.

NOTE: *If you experience an air lock during operation.*

Loosen head 1/2 to 1 turn allowing air to escape.

Retighten and continue using.

www.mastertectools.net

Operating Instructions

1. Wipe grease fitting clean before lubricating.
2. Push grease gun coupler onto grease fitting at a slight angle and then center coupler on the fitting.
3. Operate grease gun handle to lubricate.
4. Use caution not to damage seals by excessive pressure or lubricant volume.
5. After lubricating, turn coupler at a slight angle to release grip and remove.

Grease Cartridge Loading *Remove old grease cartridge if installed.*

1. Remove Head from grease gun.
2. Pullback on T-handle until the plunger rod is fully retracted and locked.
3. Remove cap from grease cartridge and place open end first into grease gun body. Push cartridge completely into body. A slight twist at the end will seat the plunger into the cartridge.
4. Remove seal from exposed end of grease cartridge.
5. Screw head back onto the grease gun body.
6. Release plunger rod lock and push rod back into grease gun body.
7. Prime grease gun by fully extending and closing lever handle several times.
8. The grease gun is now ready to use.

Suction Filling from Bulk Grease *Remove old grease cartridge if installed.*

1. Remove head from grease gun.
2. Place open end of grease gun into bulk grease container.
3. Pull plunger rod back slowly, filling body with grease. Lock plunger rod when fully retracted.
4. Clean grease gun body and replace head.
5. Release plunger rod lock and push rod back into body.
6. The grease gun is now ready to use.

Bulk Loading w/grease fill pump (#57404 only) *Remove old grease cartridge*

1. Insure proper fill coupler is installed onto grease fill pump.
2. Place fill coupler from grease fill pump onto fill adapter on grease gun.
3. Hold grease gun firmly and fill per grease fill pump instructions.