



57405 Mini Grease Gun INSTRUCTION MANUAL

WARNING

Extreme Pressure may cause nozzle extension or whip hose or burst. Use only AutoTec hoses and follow whip hose instructions and warnings.

WARNING

Grease gun can develop high pressure up to 10,000 PSI. Use safety glasses and gloves for protection during operation. Keep hands clear of the extension during operation of the grease gun.

Loading Instruction: Loading Grease Cartridge

1. Remove Head from grease gun body.
2. Pullback on T-handle until the follower is fully retracted into the container tube and locked into position.
3. Remove the cap from the grease cartridge and place open end into the body. Push cartridge completely into the body. A slight twist at the end will seat the follower in the tube.
4. Remove the seal from end of grease cartridge.
5. Screw head back onto the body.
6. Release the lock on the follower rod and push into the body.
7. Prime gun by fully extending and closing lever handle a few times.
8. You are now ready to use the grease gun.

Operating Instructions

Wipe grease fitting clean before lubricating. Push coupler into grease fitting at a slight angle and then center coupler on the fitting. Operate gun handle to lubricate, taking care not to damage seals by excessive pressure or lubricant volume. After lubricating, turn coupler at a slight angle to release grip of the coupler jaws.

www.mastertectools.net