

# AutoTEC<sup>®</sup>

74848 4.8 VOLT CORDLESS DRIVER



## INSTRUCTION MANUAL

Read all Instructions before using this tool.

### ⚠ WARNING

Do not exceed maximum charging time of 8 hours

*This Cordless Driver has not been fully charged. Before using for first time you must charge this unit for 5-8 hours.*

### Safety Instructions

*Do not use Cordless Driver, attachments or chargers for jobs other than those for which they are designed for.*

*Before screwing fastener into wall insure you are not going to hit an electrical, gas or water supply line. In case of doubt, use a metal/voltage detector.*

*Before you lay down the Cordless Driver, make sure that all moving parts have come to a stop.*

*Avoid frequent stalling when using the Cordless Driver, as this could damage the batteries.*

*Only Connect the charging device to a 110 Volt AC electrical supply.*

*Charge Cordless Driver only with the supplied charging device.*

*The charging device and the Cordless Driver must be protected from moisture.*

*Do not use the charging device outdoors in the rain.*

*To protect the Cordless Driver from damage, you should never expose it to temperatures above 50°C.*



- |                            |                      |
|----------------------------|----------------------|
| 1) Switch: Forward/Reverse | 6) Charger           |
| 2) Light Cover             | 7) Light switch      |
| 3) Bit Holder              | 8) Handle angle lock |
| 4) Charging socket         | 9) Built-in battery  |
| 5) Charger plug            | 10) Handle           |

### Operation

Insert driver bit fully into bit holder in Cordless Driver (3). Use supplied bit holder adapter if standard bits or socket-head bits are used. Before turning on Cordless Driver, attach driver bit firmly into fastener, then switch on unit to rotate in the desired direction.

### Angle adjustment

The Cordless Driver has a 3 position, angle adjustable handle. Press the lock switch (8) to change the handle angle. The hinged-handle action allows the Cordless Driver to be used in confined work areas.

### Charging

This Cordless Driver has not been fully charged. Before using for first time you must charge this unit for 5-8 hours. To do this insert the charger plug (5) into the charging socket (4) of the Cordless Driver, then plug in the charging unit (6). The Cordless Driver has a "RED" indicator light on the grip, this light will remain red letting you know the charger has power going into the battery.

**Do not exceed 8 hours charging.**

### Light

The Cordless Driver has a built in work light. Use the light switch (7) to lighten your work area.

### Care and maintenance

Clean the housing only with a damp cloth. Do not use any solvents! Dry thoroughly afterwards. In order to maintain battery capacity, we recommend the battery be completely discharged every two months and recharged again. Only store fully charged Cordless Driver and top-off the charge from time to time. Cordless Driver should be stored in a dry and frost-free location. Temperature should not exceed 50°C.

[www.mastertectools.net](http://www.mastertectools.net)